 



DELAY ON BREAK - SBR

Power must be applied to the input at all times prior to and during timing. Upon closure of the initiate switch, the output contacts transfer and remain transferred if no further action is taken. When the initiate switch is opened, the time delay begins. At the end of the pre-selected delay period, the output contacts revert to their original position. Removal of input power will reset the control.




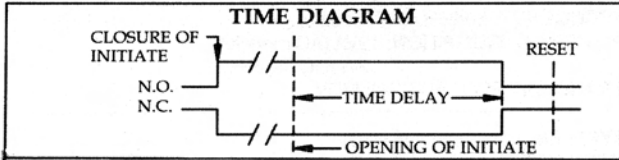


RETRIGGERABLE ONE-SHOT - SOR

 
Power must be applied to the input at all times prior to and during timing. Upon closure of the initiate switch (momentary or maintained) the output contacts transfer and the time delay begins. At the completion of the pre-selected time delay the output contacts revert to their original position. **NOTE:** Momentary or maintained closure of initiate switch during timing will reset the time delay.

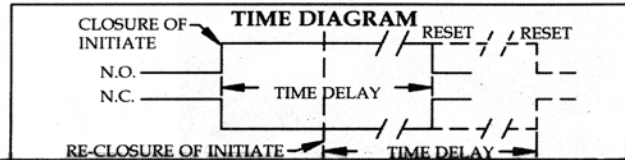


DIMENSIONS

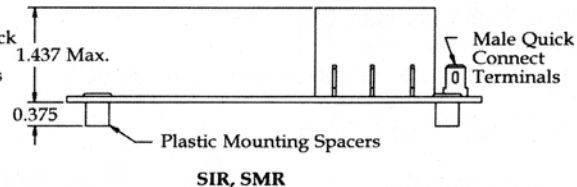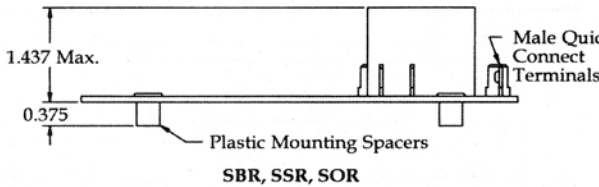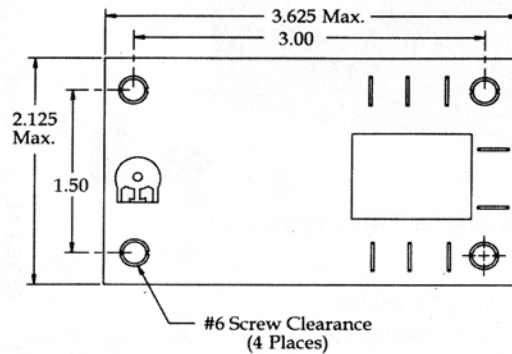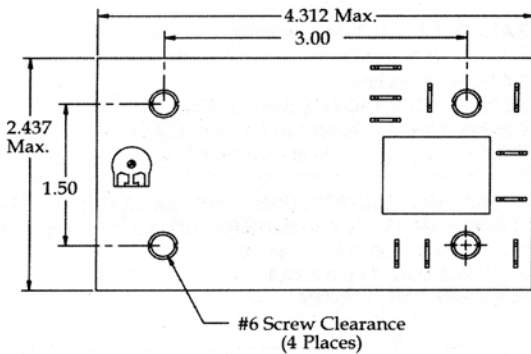    

CONNECTION DIAGRAM

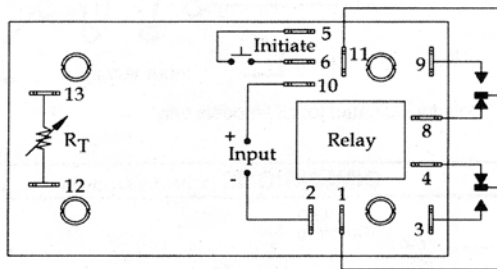 

SBR, SSR, SOR

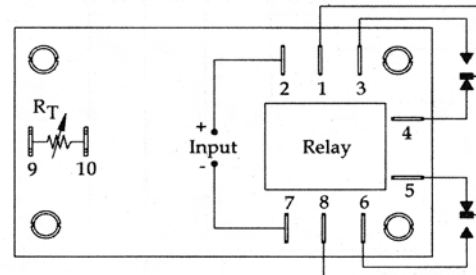 

SIR, SMR

ORDERING INFORMATION

SERIES	TERMINATION	INPUT VOLTAGE	ADJUSTMENT	TIME DELAY RANGE
SBR SIR SMR SOR SSR	2 - 3/16" Quick Connect 3 - 1/4" Quick Connect	1 - 12 VDC 2 - 24/28 VDC 3 - 110 VDC 4 - 24 VAC 5 - 120 VAC 6 - 230 VAC	0 - Knob 1 - Fixed 2 - Remote Adjustment	Call For Available Time Delay Ranges