



For **Input** or **Output** of adjustable speed drive/inverter systems

This table is suitable for selection of both input and output reactors because their harmonic compensation allows them to be used in either application. Specific current and inductance ratings are indicated. Consult distributor for any special applications (higher current, motor rating different than controller rating, etc.)

50/37.5	60/45	75/55	100/75	125/93	150/112	200/150	250/187	300/225	350/262	400/300	500/375	600/450	750/550					
RL-16001	RL-20001	RL-25001	RL-32001	RL-40001	RL-50001	RL-60001	RL-75001	CONSULT DISTRIBUTOR										
RL-16002	RL-20002	RL-25002	RL-32002	RL-40002	RL-50002	RL-60002	RL-75002											
160	200	250	320	400	500	600	750											
RL-13001	RL-16001	RL-20001	RL-25001	RL-32001	RL-40001	RL-50001	RL-60001							RL-75001				
RL-13002	RL-16002	RL-20002	RL-25002	RL-32002	RL-40002	RL-50002	RL-60002							RL-75002				
130	160	200	250	320	400	500	600							750				
RL-08002	RL-10002	RL-13003	RL-16003	RL-20003	RL-25003	RL-32003	RL-40003							RL-50003	RL-60003	RL-75003		
RL-08002	RL-08002	RL-10002	RL-13002	RL-16002	RL-20003	RL-25002	RL-40003							RL-40002	RL-50002	RL-60003	RL-75003	
RL-08002	RL-08002	RL-10002	RL-13002	RL-16002	RL-20002	RL-25002	RL-32002							RL-40002	RL-50002	RL-50002	RL-60002	RL-75002
RL-08003	RL-08003	RL-10003	RL-13003	RL-16003	RL-20003	RL-25003	RL-32003							RL-40003	RL-50003	RL-50003	RL-60003	RL-75003
80	80	100	130	160	200	250	320	400	500	500	600	750						
RL-05502	RL-08002	RL-08002	RL-10002	RL-13002	RL-16002	RL-20002	RL-25002	RL-32002	RL-40002	RL-40002	RL-50002	RL-60002	RL-75002					
RL-05503	RL-08003	RL-08003	RL-10003	RL-13003	RL-16003	RL-20003	RL-25003	RL-32003	RL-40003	RL-40003	RL-50003	RL-60003	RL-75003					
55	80	80	100	130	160	200	250	320	400	400	500	600	750					

NEMA 1 CABINETS

All Guard-AC reactors are available as either open type or in a Nema Type 1 general purpose enclosure. To order a reactor mounted in a cabinet simply change the second last digit of the part number from "0" to "1". Example RL-00802 becomes RL-00812.

REACTOR PART NUMBER	TYPE	W	H	D	WGT.	CABINET
RL-002XX, RL-004XX, RL-008XX RL-012XX, RL-01801, RL-01802	Wall Mount	8	8	6	7#	CAB-8
RL-01803, RL-025XX, RL-035XX, RL-045XX, RL-055XX, RL-080XX, RL-100XX, RL-130XX, RL-160XX, RL-200XX, RL-25001	Floor	13	15	13	31#	CAB-13
RL-25002, RL-25003, RL-320XX, RL-400XX, RL-500XX, RL-600XX	Floor	17	22	17	45#	CAB-17
RL-750XX	Floor	24	30	24	83#	CAB-24