# **MODEL 2594**

# **3-Phase Monitor**

- DPDT 600VAC Output Contacts
- Adjustable Failure Level
- Automatic Reset
- 5 Year Unconditional Warranty

# IMEMARK® 3 PHASE POWER MONITOR FAILURE INDICATOR VOLTAGE LEVEL MIN MAX

### **DESCRIPTION**

The **Model 2594 3-Phase Monitor** is designed for use with applications which require high control voltage (up to 600VAC). The Model 2594 protects 3-phase equipment and motors from phase loss, phase reversal and low voltage. When the correct voltage and phase rotation are applied, an internal DPDT relay energizes.

A fault condition drops out the relay and the FAILURE INDICATOR LED illuminates. When the existing fault is corrected the unit will automatically reset. The Model 2594 can detect a phase loss condition even when regenerative voltage is present. It may be used with WYE or Delta systems; no neutral connection required.

Standard operating ranges are available from 120 to 575VAC, 60Hz and 380VAC, 50Hz.

## **SPECIFICATIONS**

Model	A2594	B2594	C2594	D2594	EX2594
Nominal AC Voltage (phase to phase)	120VAC	208/240VAC	480VAC	575VAC	380VAC
Adjustment Range	85-125	160-260	380-500	450-600	300-400
Frequency	60Hz			50Hz	
Power Consumption	2.1W	3.3W	4.2W	6.9W	4.2W
Transient Protection	2500V for 10ms				
Repeat Accuracy	± 0.1% (fixed conditions)				
Response Time	0.05 seconds (fixed)				
Reset Time	0.05 seconds (fixed)				
Reset Type	Automatic				
Output Contacts	DPDT 3A at 480/600VAC 80% PF 10A at 240VAC 80% PF r				esistive
Expected Relay Life	Mech: 10 million operations Elec: 100,000 at rated load				
Operating Temp	- 20° to +131° F				
Humidity Tolerance	0-97% w/o condensation				
Enclosure Material	20 gauge steel				
Mounting	Surface				
Weight	17 oz.				

## **DIMENSIONS**

4.25"

.19 dia. typ. -

Telephone: Main - (918) 438-1220 Sales - (800) 862-2875


Fax: (918) 437-7584

E-mail: sales@time-mark.com http://www.time-mark.com



11440 East Pine Street Tulsa, Oklahoma 74116 11/2011

© 2011 TIME MARK CORPORATION

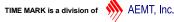

# **MODEL 2594** 3-Phase Monitor

READ ALL INSTRUCTIONS BEFORE INSTALLING, OPERATING OR SERVICING THIS DEVICE. KEEP THIS DATA SHEET FOR FUTURE REFERENCE.

## **GENERAL SAFETY**

POTENTIALLY HAZARDOUS VOLTAGES ARE PRESENT AT THE TERMINALS OF THE MODEL 2594. ALL ELECTRICAL POWER SHOULD BE REMOVED WHEN CONNECTING OR DISCONNECTING WIRING. THIS DEVICE SHOULD BE INSTALLED AND SERVICED BY QUALIFIED PERSONNEL.

# Installation Instructions

### INSTALLATION

Connect the 3-phase wiring to the terminals marked L1, L2, L3.

Connect the control wiring to the terminals with the contact markings (refer to the diagram on the unit). The markings shown on the unit are the failed condition of the contacts.

Apply power.

If the contacts do not transfer (FAILURE INDICATOR-On), check that all three phases are present and of the correct voltage.

If all phases are correct, rotate the VOLTAGE LEVEL adjustment counter-clockwise to the MIN position. If the contacts still do not transfer, remove power from the unit.

Reverse two of the three input wires and re-apply power. The contacts should transfer to the normal condition (normally-open contacts closed, FAILURE INDICATOR-Off).

### **ADJUSTMENT**

Note: During adjustment you may wish to install a jumper across the control contacts to prevent cycling the load on and off.

Rotate the VOLTAGE LEVEL adjustment slowly clockwise until the contacts transfer to the failed condition (FAILURE INDICATOR-On). Slowly turn the adjustment counterclockwise until the contacts reset to the normal condition (FAILURE INDICATOR-Off).


Remove the jumper, if installed.

This setting will be correct for most applications. nuisance tripping occurs, turn the VOLTAGE LEVEL slightly farther counter-clockwise.

Any adjustments to the VOLTAGE LEVEL, to eliminate nuisance tripping, should be made in very small increments, until the true nuisance trips are eliminated.


## TYPICAL APPLICATION

Individual Motor Protection

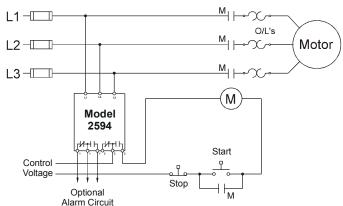

### TYPICAL APPLICATION

System Alarm Operation

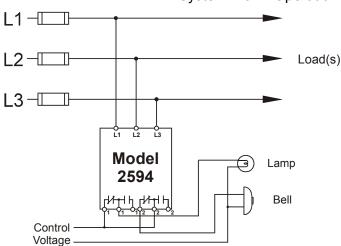

### WARRANTY

This product is warranted to be free from defects in materials and workmanship, and is covered by our exclusive 5-year Unconditional Warranty. Should this device fail to operate for any reason, we will repair it for five years from the date of manufacture. For complete warranty details, see the Terms and Conditions of Sales page in the front section of the Time Mark catalog or contact Time Mark at 1-800-862-2875.

(918) 438-1220 Telephone: Main -

Sales -(800) 862-2875

(918) 437-7584 Fax:

sales@time-mark.com E-mail: http://www.time-mark.com Internet:



11440 East Pine Street Tulsa, Oklahoma 74116

11/2011 © 2011 TIME MARK CORPORATION

