



CABLE INSTALLATION GUIDE.

1. INSTALL COMPONENTS INTO LID,
(USE 1553WTS100 #2 X 3/16" PLASTITE
SELF-TAPPING SCREW NOT SUPPLIED.)
TORQUE SCREWS TO 15-20 cN-m [21-28 ozf-in]



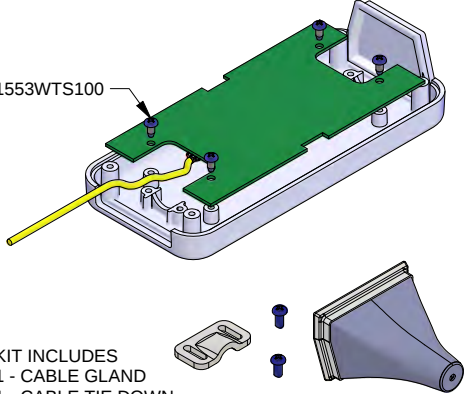


KIT INCLUDES
1 - CABLE GLAND
1 - CABLE TIE DOWN
2 - #2 X 1/4" SELF - TAPPING SCREW





2.

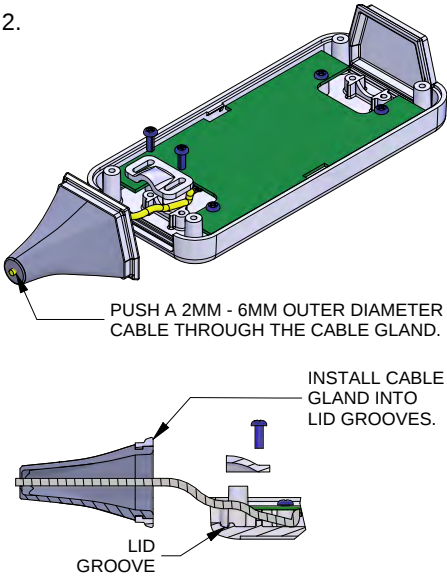

CABLE TIE ORIENTATION

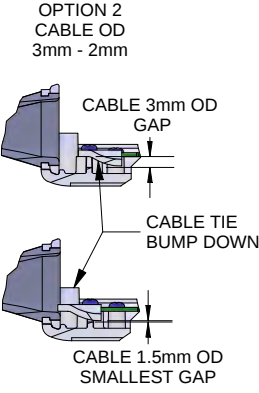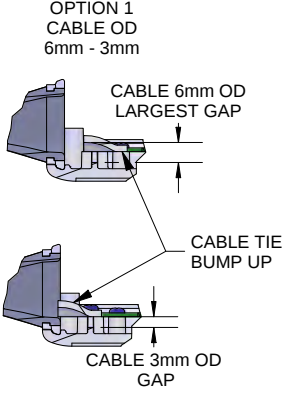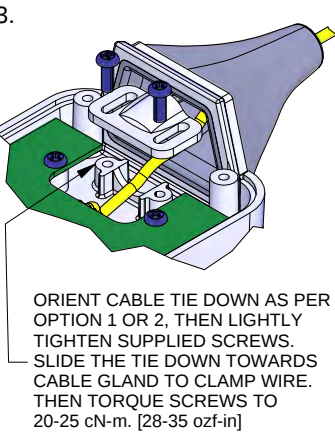

4. INSTALL THE BOTTOM HALF OF THE ENCLOSURE TO THE
RECOMMENDED TORQUE OF 15-20 cN-m [21-28 ozf-in]

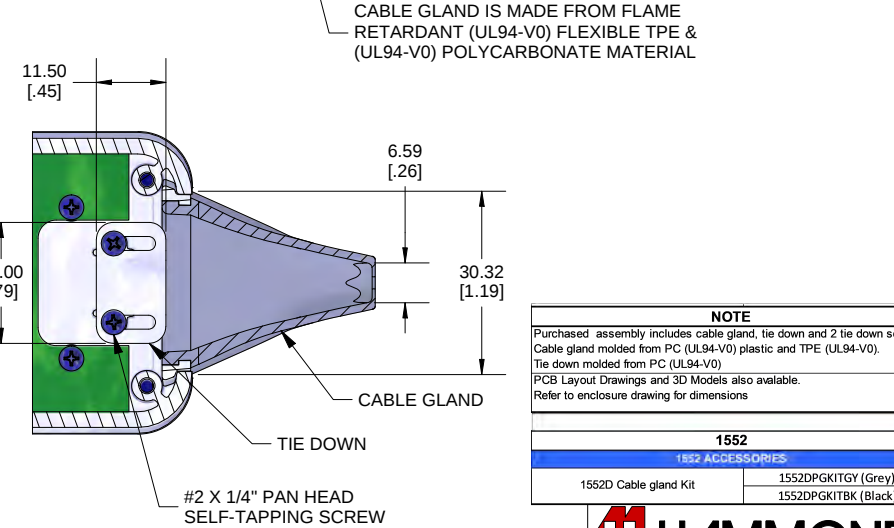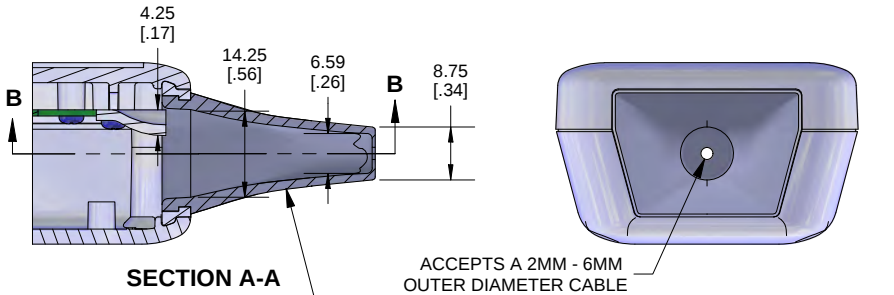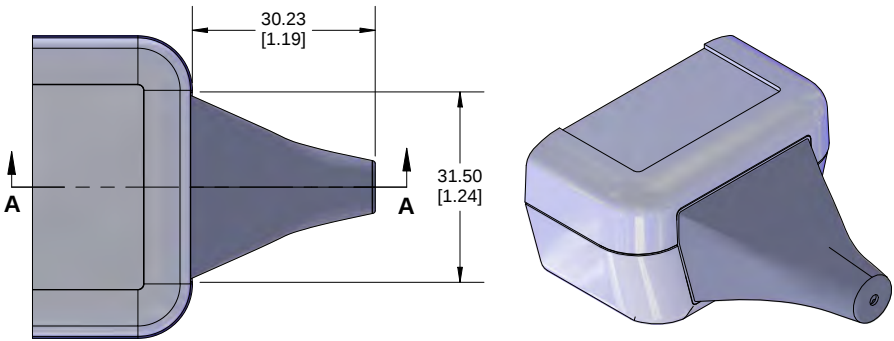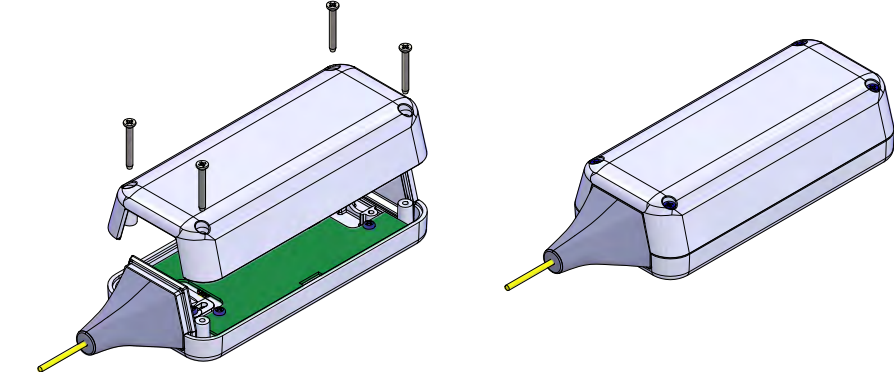

SECTION B-B

NOTE
Purchased assembly includes cable gland, tie down and 2 tie down screws.
Cable gland molded from PC (UL94-V0) plastic and TPE (UL94-V0).
Tie down molded from PC (UL94-V0).
PCB Layout Drawings and 3D Models also available.
Refer to enclosure drawing for dimensions

1552	
1552 ACCESSORIES	
1552D Cable gland Kit	1552DPGKITGY (Grey) 1552DPGKITBK (Black)

HAMMOND
1552D CABLE GLAND KIT
INSTRUCTIONS
www.hammondmgf.com

REV 18.07.2025