MODEL 4092

Dual Seal Failure Detector


- 120VAC and 240VAC versions
- Adjustable sensitivity
- Automatic reset
- Five year unconditional warranty



The **Model 4092 Dual Seal Failure Detector** is designed specifically for monitoring the shaft seals of two submersible pumps.

The probes are installed in the seal cavities of each of the pumps. When a seal begins to leak, contaminating fluid enters the seal cavity, lowering the resistance between the probe and the common connection. If the resistance drops below the sensitivity setpoint, the corresponding relay and the LED indicator are activated. The Model 4092 will automatically reset when the fault condition is corrected. The sensitivity is field adjustable.

DIMENSIONS

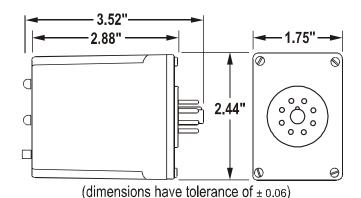



SPECIFICATIONS

| MODEL | 4092-120 | 4092-240 |
|-----------------------|--|----------------|
| Supply voltage | 120VAC 50/60Hz | 240VAC 50/60Hz |
| Power consumption | 1.5W | |
| Probe voltage | 9VDC | |
| Sensitivity | 10K ohm - 25K ohm | |
| Response time | 15ms | |
| Reset time | 15ms | |
| Output contacts | 2 SPST N.O. | |
| Contact rating | 5A @ 250VAC resistive | |
| Expected relay life | Mechanical: 50 million operations Electrical: 100,000 oper. at rated load | |
| Operating temperature | -13° to +140° F | |
| Humidity tolerance | 0 to 97% w/o condensation | |
| Enclosure material | ABS plastic | |
| Mounting | 8-pin socket (*order separately) | |
| Weight | 6 oz. | |

^{*} Order 8-pin socket number 51X120

| ORDERING INFORMATION | | | |
|----------------------|-------|----------------|--|
| Order by: | MODEL | VOLTS | |
| Options: | 4092 | 120 VAC | |
| | | 240 VAC | |

Telephone: Main - (918) 438-1220

Sales - (800) 862-2875 Fax: (918) 437-7584

E-mail: sales@time-mark.com http://www.time-mark.com



11440 East Pine Street Tulsa, Oklahoma 74116 11/2011

© 2011 TIME MARK CORPORATION



MODEL 4092

Dual Seal Failure Detector

READ ALL INSTRUCTIONS BEFORE INSTALLING, OPERATING OR SERVICING THIS DEVICE.

KEEP THIS DATA SHEET FOR FUTURE REFERENCE.

GENERAL SAFETY

POTENTIALLY HAZARDOUS VOLTAGES ARE PRESENT AT THE TERMINALS OF THE MODEL 4092.
ALL ELECTRICAL POWER SHOULD BE REMOVED WHEN CONNECTING OR DISCONNECTING WIRING.
THIS DEVICE SHOULD BE INSTALLED AND SERVICED BY QUALIFIED PERSONNEL.

Installation Instructions

INSTALLATION

Mount the 8-pin socket in a suitable enclosure. A NEMA -1 approved enclosure, designed for socket-mounted relays, is available from Time Mark Corporation.(Model 98A498)

Connect the supply voltage to Terminals 1 and 2 on the socket.


Connect the load control wiring to the appropriate terminals on the socket, refer to the Pin Diagram and Typical Application drawing.

Insert the Model 4092 into the socket and apply power.

Set the SENSITIVITY control as described below.

NOTE: When installing the Model 4092 Failure Detector in areas of high humidity or contamination, it is recommended that the base area and all exposed metal parts of the socket be coated liberally with a good quality silicone grease, such as Dow Corning DC-4 or DC-4X. Insert the unit into the socket and wipe off excess grease around the base. This will prevent the entrance of moisture and other contaminates into the base and socket areas.

PIN DIAGRAM

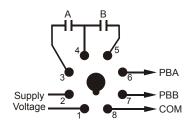


ADJUSTMENT SETTINGS

Set the SENSITIVITY control knob to the maximum clockwise position. Do not use excessive force.

If either LED indicator is illuminated, adjust the control knob counter-clockwise, until both lights are off.

TYPICAL APPLICATION

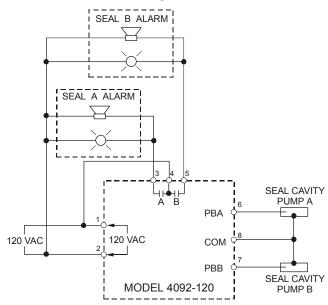

Shows No Power Applied

TROUBLESHOOTING

Should the Model 4092 Monitor fail to operate properly, check wiring to insure proper connections. Measure the supply voltage. Repeat the SENSITIVITY Control adjustment procedure. If problems persist, contact your local Time Mark Distributor, or the factory, for assistance (Monday-Friday, 8 a.m. to 5 p.m. CST).

WARRANTY

This product is warranted to be free from defects in materials and workmanship, and is covered by our exclusive **5-year Unconditional Warranty**. Should this device fail to operate for any reason, we will repair it for five years from the date of manufacture. For complete warranty details, see the *Terms and Conditions of Sales* page in the front section of the Time Mark catalog or contact Time Mark at 1-800-862-2875.

Telephone: Main - (918) 438-1220

Sales - (800) 862-2875 Fax: (918) 437-7584

E-mail: sales@time-mark.com Internet: http://www.time-mark.com



11440 East Pine Street Tulsa, Oklahoma 74116

11/2011

© 2011 TIME MARK CORPORATION

